

START-Einstellschrauben für Flüssiggas

START-Setting screw for LPG

START-Vis de butée pour propane

START-Vite regolazione per gas liquido

START-Tornillo de regulación para gas liquido


START-Instelschroef voor propaan

START-Indstillingskrue for fleskegas



Verwendung/Application/Emplou/Impiego/Empleo/Gebruik/Anvendelse:

- Erdgasarmatur + START-Einstellschraube A, B, C, D, E, F, G = Flüssiggasarmatur
- Gas valve for natural gas + START-Setting screw A, B, C, D, E, F, G = Gas valve for LPG
- Armature gaz naturel + START-Vis de butée A, B, C, D, E, F, G = Armature gaz propane
- Gruppo gas metano + START-Vite regolazione A, B, C, D, E, F, G = Gruppo gas liquido
- Cuerpo de gas natural + START-Tornillo de regulación A, B, C, D, E, F, G = Cuerpo de gas liquido
- Gasregelblok voor aardgas + START-Instelschroef A, B, C, D, E, F, G = Gasregelblok voor propaan
- Gasarmatur for Naturgas + START-Indstillingskrue A, B, C, D, E, F, G = Gasarmatur for fleskegas.

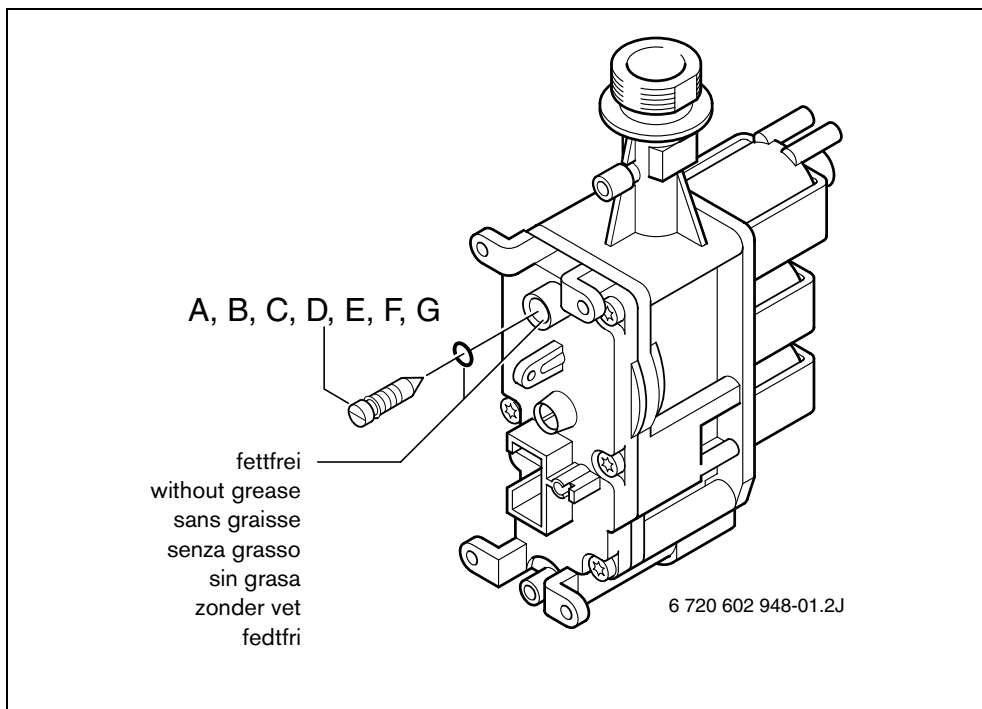

Schraube/Screw/Vis/Vite/Tornillo/ Schroef/Skrue		Kennzeichen/Code/Référence/Marcato/ Indicativo/Kode/Kode
A	8 743 404 287	2
B	8 743 404 288	2,3
C	8 743 404 286	1,8
D	8 743 404 294	-
E	8 743 404 304	1,5
F	8 743 404 285	1,6
G	8 743 404 303	2,6

Gerätetyp/Model/Type/Tipo/ Tipo/Type/Apparat			Anschlussdruck/Inlet flowing pressure/ Pression de gaz/Pressione/Presión de conexión/ Aansluitdruk/Gastilslutningstryk	
			50 mbar	30 mbar
ZR/ ZSR ..	8	-3 K ../KE .. -3 A ../AE ..	E	-
	11	-3 K ../KE .. -3 A ../AE ..	E	-
ZR/ ZSR/ ZWR ..	18	-3 K ../KE .. -3 A ../AE ..	A	A
	24	-3 K ../KE .. -3 A ../AE ..	A	B
ZWE ..	24	-1 K ../-2 K ../-2 A ..	-	C
		-1 K ../-2 K ..	-	F
		-1 A .. -1 K .. S0200	-	A
		CX ...	-	G
		-1 K .. S0200 Erdgas/Natural gas/ gaz naturel/gas metano/ gas natural/aardgas/ Naturgas	D	D